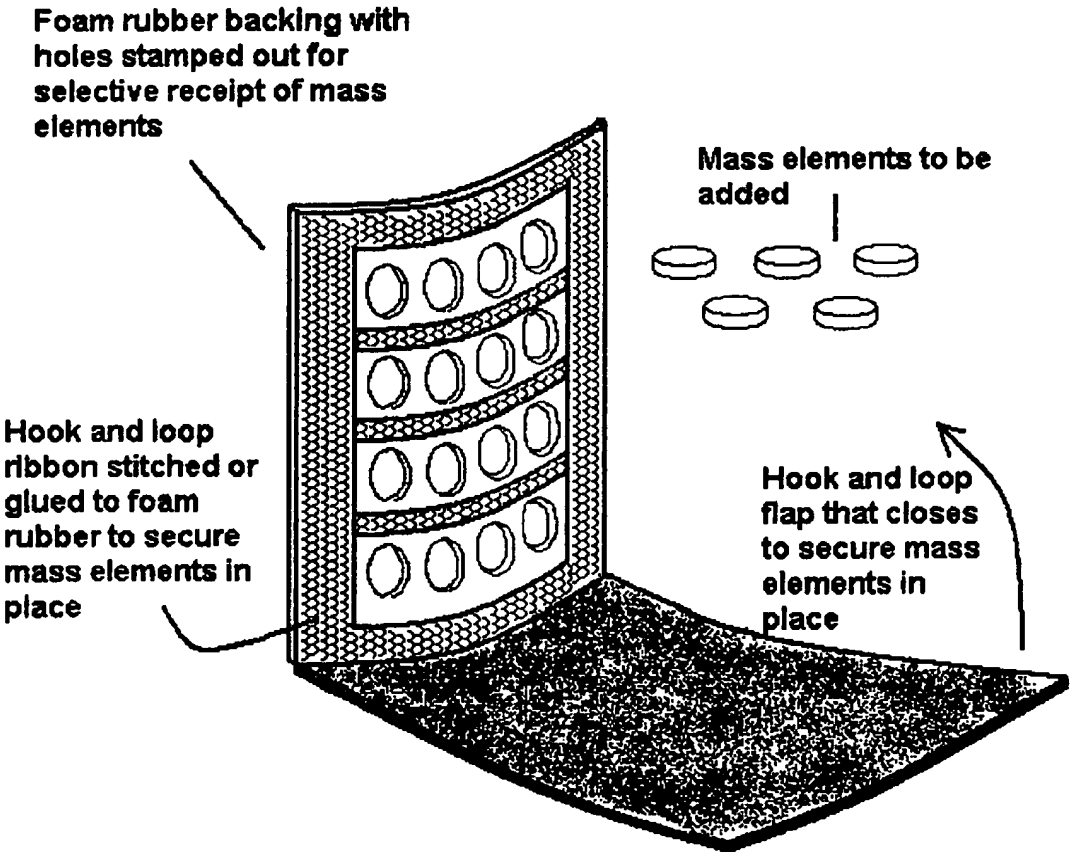
Foam rubber backing with holes stamped out for selective receipt of mass elements
Mass elements to be added
Hook and loop ribbon stitched or glued to foam rubber to secure mass elements in place
Hook and loop flap that closes to secure mass elements in place

Figure 5

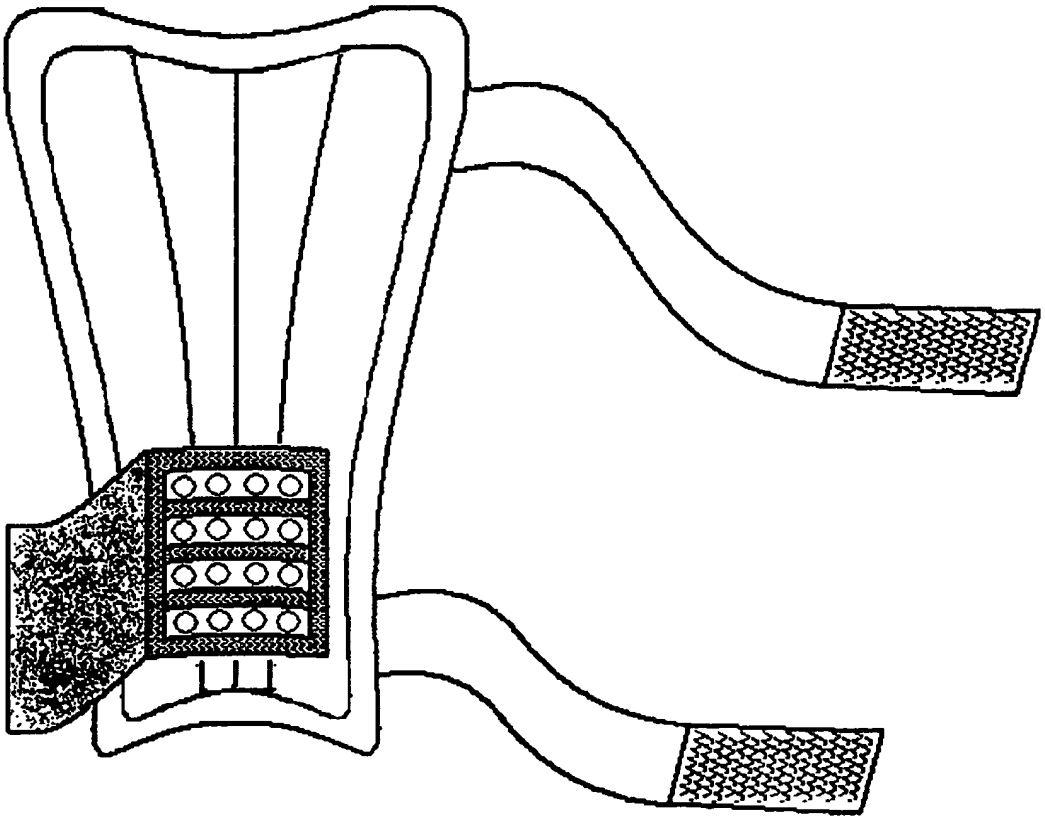

Figure 6

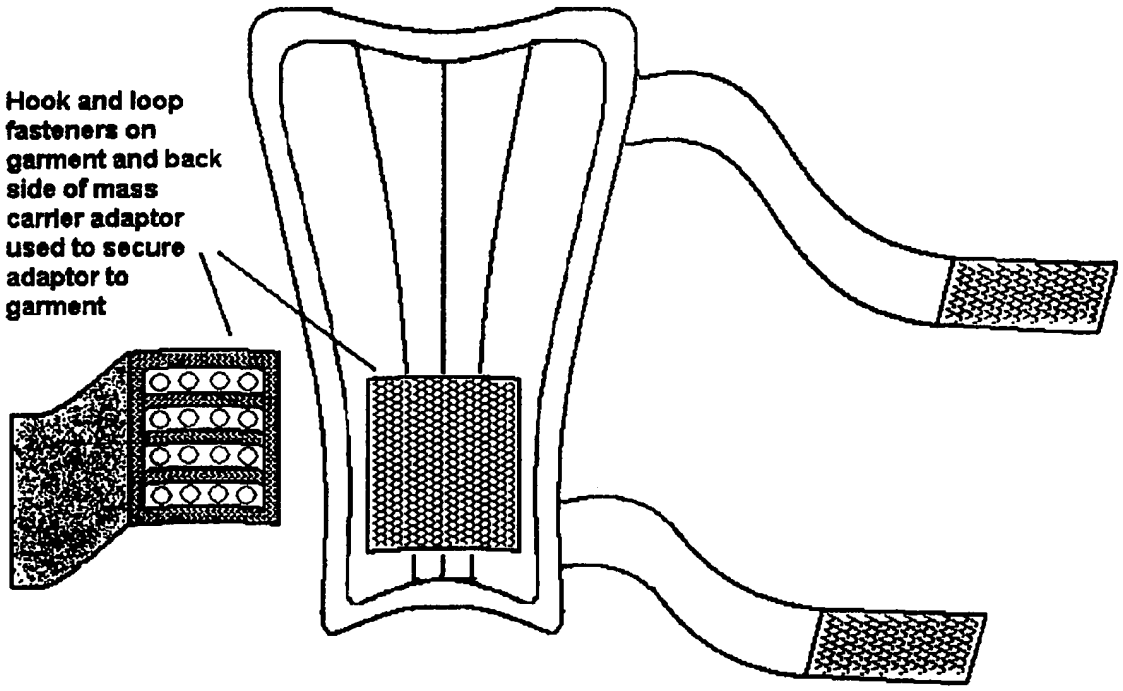
Hook and loop fasteners on garment and back side of mass carrier adaptor used to secure adaptor to garment

Figure 7

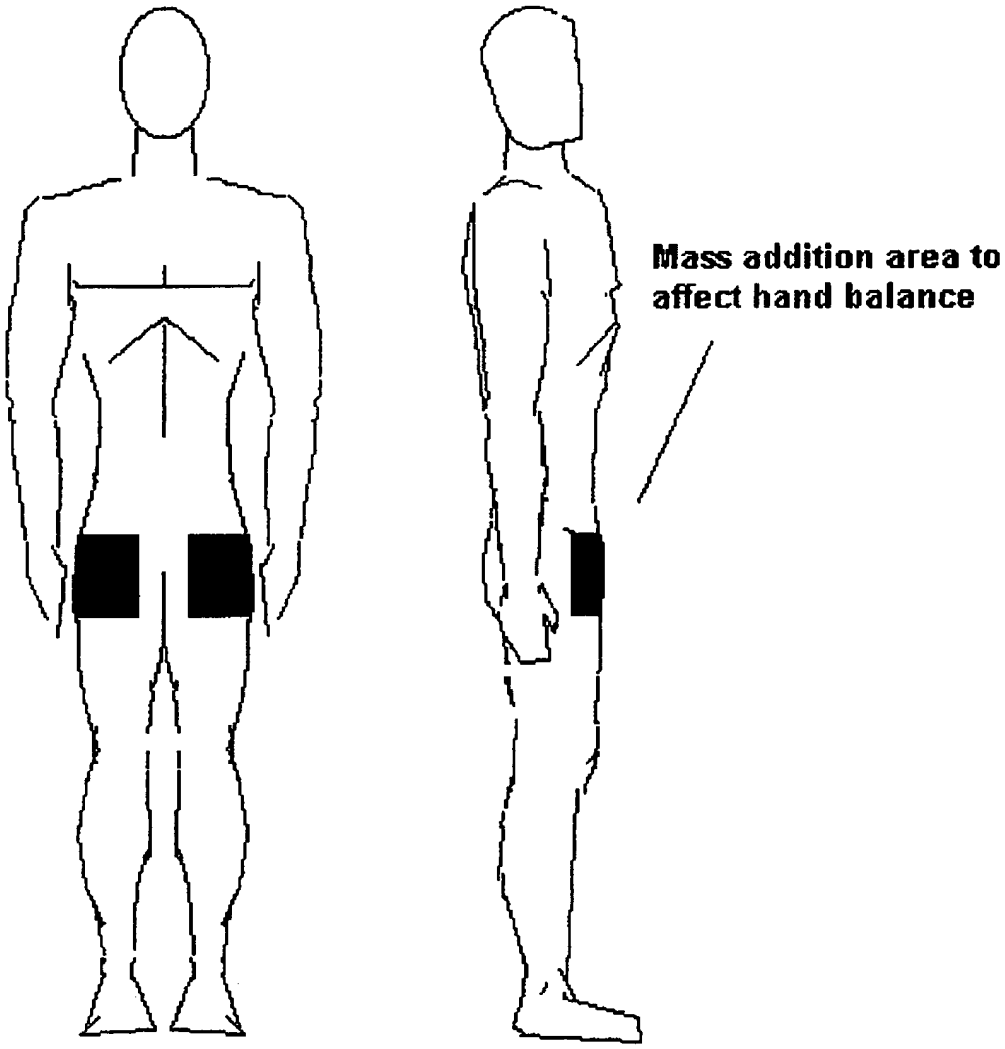

Figure 4

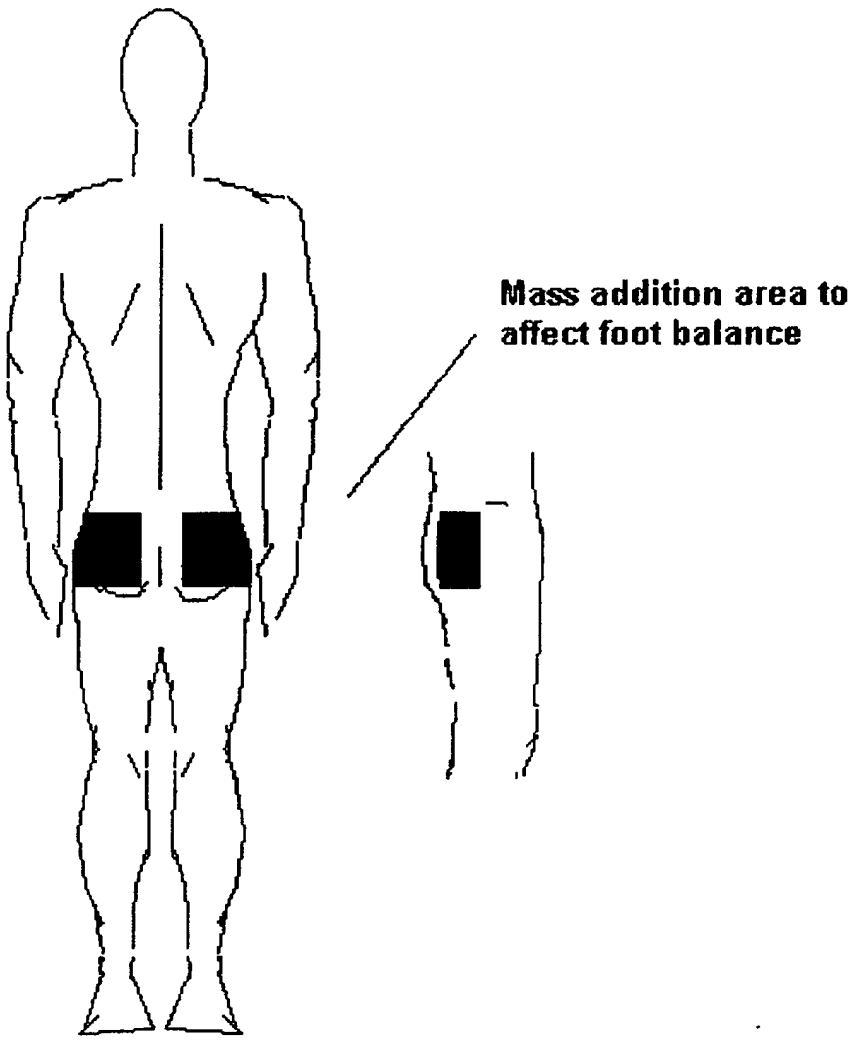

Figure 3

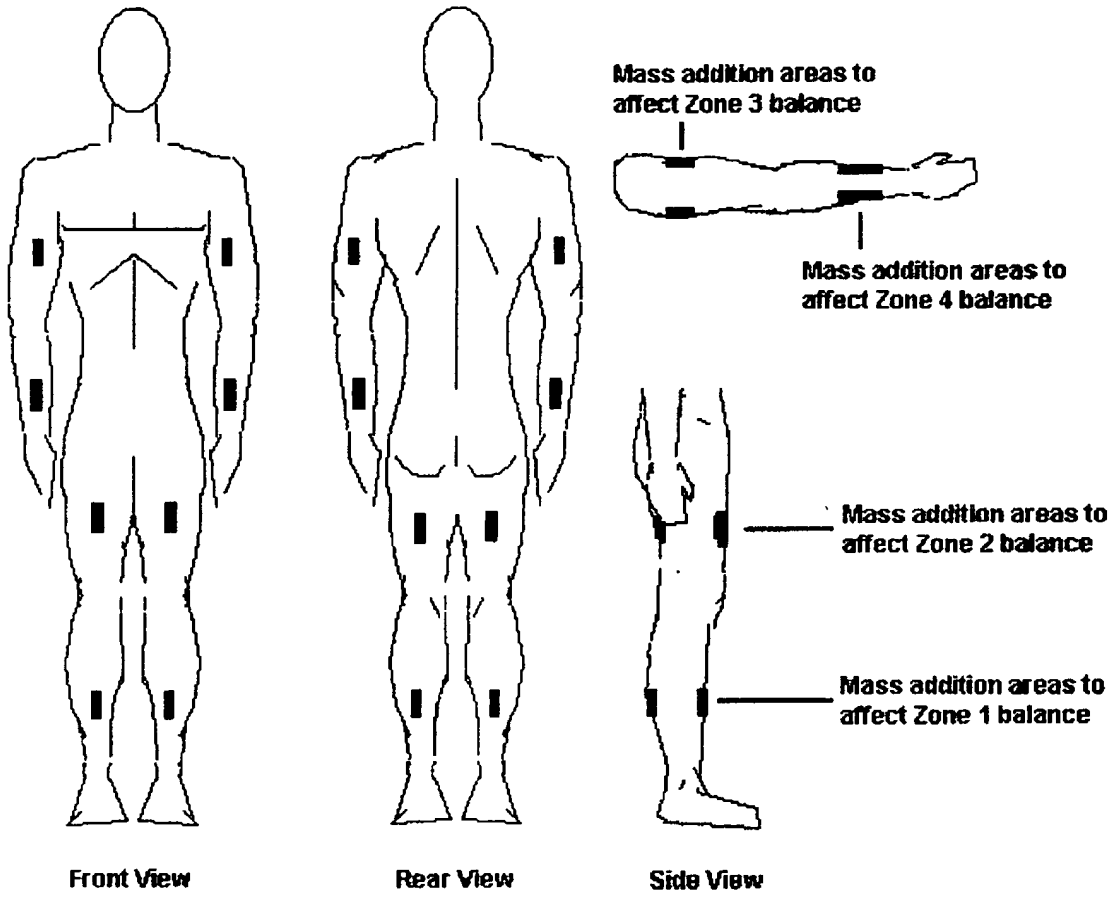
Mass addition areas to affect Zone 3 balance
Mass addition areas to affect Zone 4 balance
Mass addition areas to affect Zone 2 balance
Mass addition areas to affect Zone 1 balance
Front View
Rear View
Side View

Figure 2

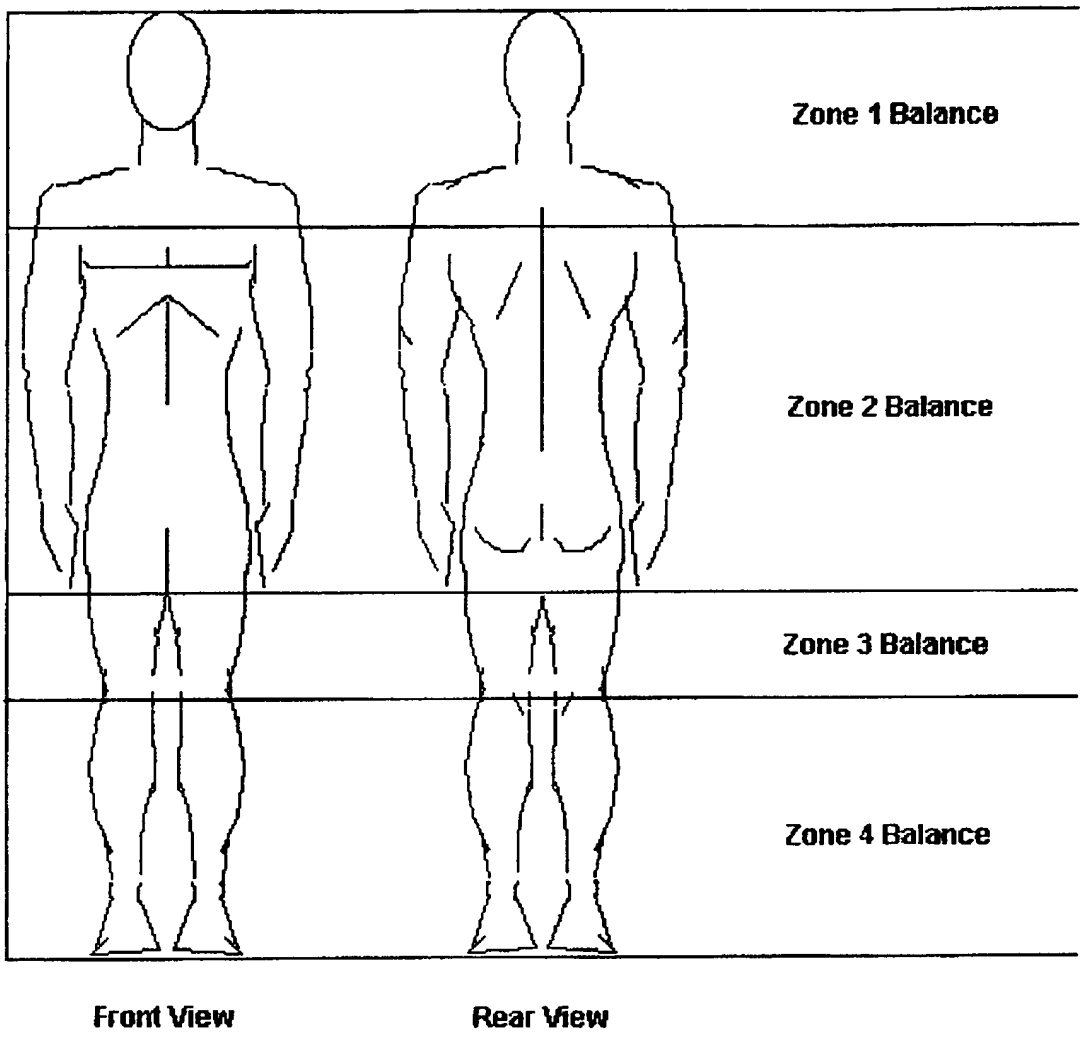
Zone 1 Balance
Zone 2 Balance
Zone 3 Balance
Zone 4 Balance
Front View
Rear View

Figure 1